

# Design Tools

## System Settings



### 2. System Settings

Loop, I2C/PMBus Address, Vin, T Sense, Fsw

Used to configure number of phases in each loops, the switching frequency, the Vboot, and I2C/PMBus/loop address, and temperature sensing. Remember to press and **Apply** and **Ok** to program the settings.

Users can configure the desired method for temperature sensing for each loop.

